

English.....	1
Svenska.....	2
Norsk.....	3
Dansk.....	4
Suomi.....	5
Deutsch.....	6
Netherlands.....	7
Français.....	8
Italiano.....	9
Español.....	10
Português.....	11
Polski.....	12
Eesti.....	13
Lietuviškai.....	14
Latviski.....	15

Vibration Meter 4800

Vibration meter for control of machines, pump, fan, electric and pneumatic hand tools, etc. To measure the vibration is an important way to prevent ergonomic human injuries, and to prevent future maintenance on the machines.

Supplied with sensor and manual.

Specification

Acceleration	m/s ²	0 - 200
Min reading		0,1
Velocity	mm/s	0 - 200
Min reading		0,1
Displacement	µm	1 - 2000
Battery		1 pc. 9V type 6F22
Sensor diameter	mm	25
Dimension	mm	160x68x30
Weight	g	200

Setting. Select Acceleration, Velocity or Displacement with the slide button on top.

Measuring. Attach the magnetic sensor on the machine, press the button and read the measured value. The reading will remain on display, about 1 minute after the button is released. The instrument are made for indoor use.

Battery. Replace the battery when the battery icon appears on the display. Remove the battery if the instrument is not to be used for a long time.