

Husky™ 1050HP

High Pressure Air-Operated Diaphragm Pump (2:1)



- Increased fluid pressure without sacrificing flow
- Low-high pressure mode valve lets you operate the pump as a standard AODD (1:1) or a high pressure AODD (2:1)
- Reduce air consumption up to 50% with the low pressure mode
- Same repair parts as our Husky 1050 AODD which reduces inventory levels

Husky[™] 1050HP

The Husky 1050HP allows users to choose between low pressure (1:1) and high pressure (2:1) operating modes with Graco's low-high pressure mode valve. High pressure operation isn't always required, so switch to the low pressure mode to reduce air consumption up to 50%. These features, combined with the quality and reliability of our standard Husky diaphragm pump design, makes this one of the most unique high pressure diaphragm pumps on the market.

Material Options


Balls



Seats



Diaphragms

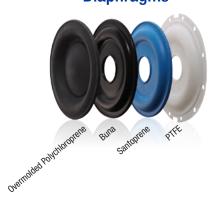

Application Areas



Filter Press Applications C

The Husky 1050HP pump is ideal for filter press applications. The full flow and high pressure design allows for maximum flow rate through the press to keep your operation running at top capacity.



Ceramic Applications

For ceramic applications, use the low pressure mode for the initial mold filling to maintain process speed. Final mold pack can be performed in the high pressure mode to remove air pockets for a higher finish quality.



High Head Pressure or Long Distance Applications

The high pressure mode of the Husky 1050HP is great for applications that require additional head pressure to pump fluid against higher pressures or longer distances.

RECOMMENDED MATERIALS


Fluid Manifolds / Covers	Aluminium or Stainless Steel
Seat	Stainless Steel or Geolast
Ball	Weighted Neoprene or Stainless Steel
Diaphragms	Overmolded Neoprene or Buna

RECOMMENDED MATERIALS


Fluid Manifolds / Covers	Aluminium or Stainless Steel
Seat	Santoprene or Stainless Steel
Ball	Santoprene or Stainless Steel
Diaphragms	Santoprene or 2-piece PTFE

RECOMMENDED MATERIALS

Any material configuration can be used as long as chemical compatibility has been verified.

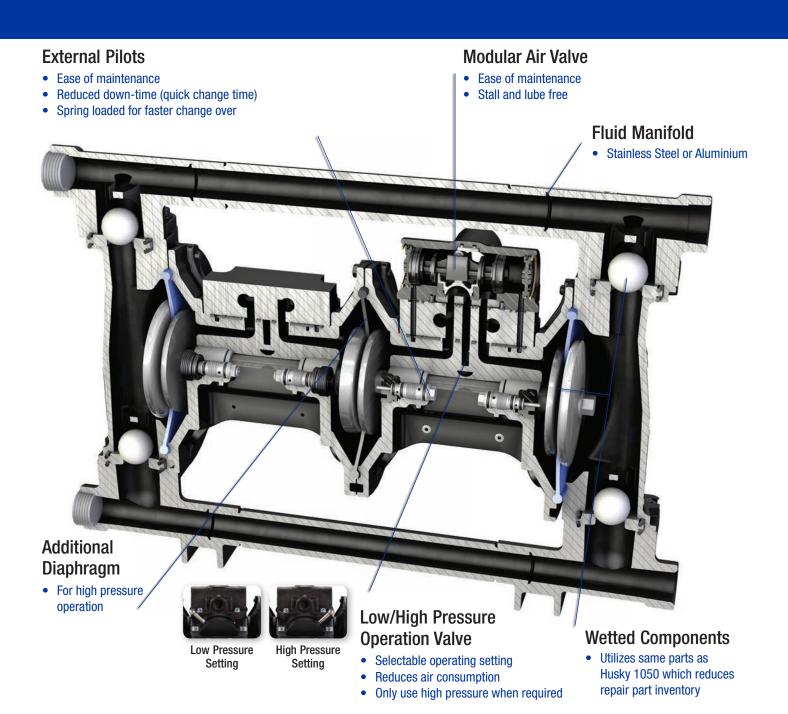

Performance

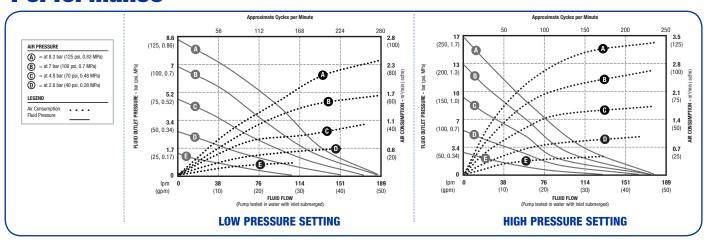

Ordering Information

Part No.	Seat	Ball	Fluid Diaphragm	Center Diaphragm	Fluid Covers	Fluid Manifold	Porting
24W756	Stainless Steel	Santoprene	Santoprene	Santoprene	Stainless Steel	Aluminium	NPT
24W757	Stainless Steel	Santoprene	Santoprene	Santoprene	Stainless Steel	Aluminium	BSPT
24W758	Stainless Steel	Santoprene	Santoprene	Santoprene	Stainless Steel	Stainless Steel	NPT
24W759	Stainless Steel	Santoprene	Santoprene	Santoprene	Stainless Steel	Stainless Steel	BSPT
24W762	Santoprene	Santoprene	Santoprene	Santoprene	Stainless Steel	Aluminium	NPT
24W763	Santoprene	Santoprene	Santoprene	Santoprene	Stainless Steel	Aluminium	BSPT
24W764	Geolast	Geolast	Buna	Santoprene	Stainless Steel	Aluminium	NPT
24W765	Geolast	Geolast	Buna	Santoprene	Stainless Steel	Aluminium	BSPT
24W766	Stainless Steel	Weighted Neoprene	Buna	Santoprene	Stainless Steel	Aluminium	NPT
24W767	Stainless Steel	Weighted Neoprene	Buna	Santoprene	Stainless Steel	Aluminium	BSPT
24W768	Stainless Steel	Weighted Neoprene	Neoprene Overmold	Santoprene	Stainless Steel	Aluminium	NPT
24W769	Stainless Steel	Weighted Neoprene	Neoprene Overmold	Santoprene	Stainless Steel	Aluminium	BSPT
24X388	Stainless Steel	Stainless Steel	2-piece PTFE/Santoprene	Santoprene	Stainless Steel	Stainless Steel	NPT
24X389	Stainless Steel	Stainless Steel	2-piece PTFE/Santoprene	Santoprene	Stainless Steel	Stainless Steel	BSPT

^{*}Note: All fluid covers are stainless steel. Fluid manifolds will differ between Aluminium and stainless steel.

Technical Specifications

·
Maximum fluid working pressure
Fluid displacement per cycle
Low Pressure Setting
High Pressure Setting
Air consumption at 4.8 bar (70 psi), 76lpm (20 gpm)
Low Pressure Setting
High Pressure Setting
Maximum values with water as media under submerged inlet conditions at ambient temperature:
Maximum air consumption
Low Pressure Setting
High Pressure Setting
Maximum free-flow delivery
Low Pressure Setting
High Pressure Setting
Maximum pump speed
Low Pressure Setting
High Pressure Setting
Maximum suction lift*
Dry
Wet
Maximum size pumpable solids
Recommended cycle rate for continuous use
Air inlet size
Fluid inlet size
Fluid outlet size
Weight
Aluminium manifolds
SST manifolds
Wetted partsAluminium or stainless steel plus the material(s) chosen for seat, ball, and diaphragm options
Non-wetted external parts
*Varies based on ball/seat selection and wear, operating speed, material properties, and other variables

All written and visual data contained in this document are based on the latest product information available at the time of publication. Graco reserves the right to make changes at any time without notice.

Graco is certified ISO 9001.

